

Discover your **NEW**

HONNE for HOME

Instruction Manual



by HEDONE®

Table of Contents

Safety Instructions.....	3
Technical Specifications.....	4
Grinder Overview.....	5
Mounting the Funnel Cover & Funnel.....	6
Inserting & Removing the Portafilter.....	7
The Grinding Process.....	8
Setting the Desired Grind.....	9
Cleaning and Maintenance.....	10
Troubleshooting.....	11

Safety Instructions

When opening the package, carefully check to ensure that the appliance is intact and shows no signs of damage or deterioration. If in doubt, please contact us. Packaging materials must be collected and disposed of in compliance with applicable safety regulations and legal provisions.

All Honne grinders are factory-tested, which is why you might find coffee grounds on their base.

⚠ Keep out of children's reach!

⚠ WARNING! Incorrect installation of the grinder may cause damage to the appliance, for which we cannot be held responsible. Please follow the guidance in this instruction manual carefully before use.

⚠ The appliance must be placed on a stable, flat surface - it weighs 17 kg.

⚠ Do not install the appliance in environments with extreme temperatures, or expose it to rain or direct sunlight.

⚠ Ensure that the voltage and frequency of the mains supply match the target ratings indicated on the technical data sheet of the appliance.

⚠ The appliance must be properly earthed and connected to a grounded power supply.

⚠ WARNING! Inserting foreign objects (other than whole coffee beans or commonly used coffee grinder cleaning products) into the grinder will cause damage!

Technical Specifications

Dimensions:

Height: 34cm

Length: 25cm

Width: 19cm

Weight: 17kg

Specifications:

Body: Aluminium

Burrs: 84mm Hybrid

Electrical:

1. 220–240V; 50/60Hz; 250W

2. 110–120V; 50/60Hz; 250W



84mm Hybrid Burrs

Aligned to a 0.03mm Tolerance



Patent-Pending **Zero-Retention**
Spinner Module



500RPM Cold-Grinding to
Preserve Aromatics



Built with **Single-Dosing**
in Mind




Hand-Crafted in the EU with
Premium, Lasting Materials



Tactile Usage Experience with
Minimum Friction

Meet your new HONNE

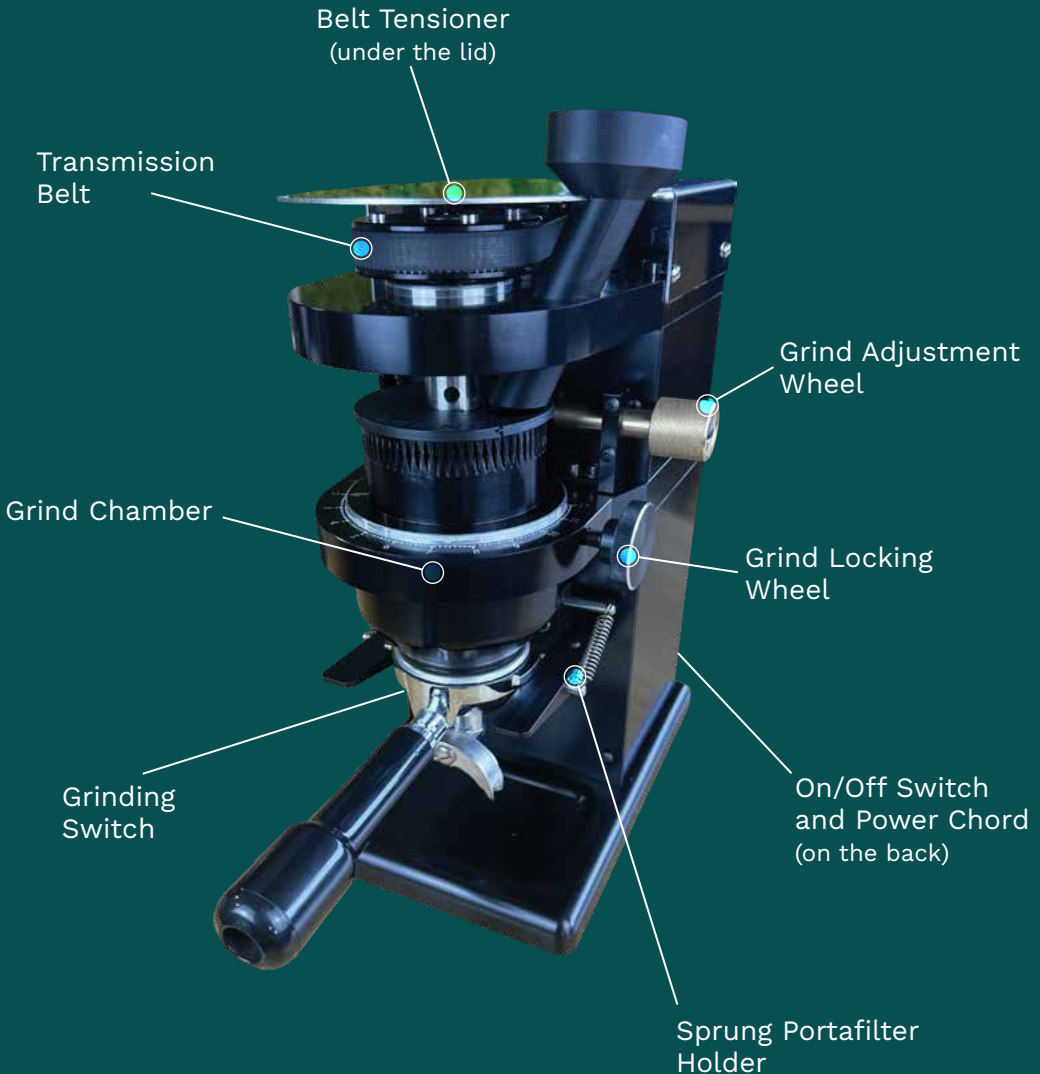

Mounting the Funnel Cover & Funnel

- ✔ Ensure you have two cover pieces, identical in dimensions, and verify that both are clean and free from damage.
- ✔ Place both pieces over the grinding chamber, positioning them so that the funnel opening faces to the right (as viewed from the front).
- ✔ Gently press the two pieces together. The pair will lock via two cylindrical protrusions (bosses) on one piece that snap into corresponding recesses (holes) on the mating piece.
- ✔ Confirm that the assembled cover sits flush on the chamber, with no gaps or misalignment.
- ✔ Insert the funnel so that it fits precisely into the dedicated cutout in the metallic lid of the grinder and aligns with the opening in the cover.
 - ➔ If the funnel does not seat properly on the first attempt, gently rotate the cover clockwise or counter-clockwise until it naturally falls into place.
- ✔ Operating the grinder without the cover may result in performance issues such as “popcorning.”



Scan this QR code to watch a
step-by-step
video tutorial.



Inserting & Removing the Portafilter


- ✔ Pull the sprung holder downwards.
- ✔ Place the rim of the portafilter around the grinding chute, on the rubber gasket.
- ✔ Slowly release the sprung holder to secure in place.
- ✔ Repeat the process in reverse to remove portafilter.



Grinding Coffee

- ✔ Lock the portafilter in place.
- ✔ Flip the grinding switch up.
- ✔ Pour beans through the 3D-printed funnel.
- ✔ When you no longer hear beans grinding, then flip the grinding switch down.
- ✔ Wait for the zero-retention spin, and carefully remove the portafilter.

⚠ WARNING! Leaving the motor on for very long will lead to its accelerated degradation by overheating.

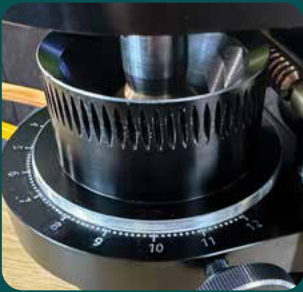

Achieving Zero Retention

- ✔ Always wait until you no longer hear beans grinding at all.
- ✔ Once you switch the grinding off, the patent-pending zero retention backspinning will do its job.
- ✔ Pull the portafilter holder down and release to knock the remaining grounds from the chute.

Changing the Grind Size

- ✔ Unlock the grind by turning the lower aluminium wheel.
- ✔ Turn the (upper) grinding wheel to spin the worm-gear, setting the grind.
- ✔ Watch the silver arrow to set the desired grind size.
- ✔ Lock the grind by turning the lower wheel. Do not tighten hard.



Cleaning & Maintenance

The stainless steel surfaces are covered in a protective wrap. Once you remove it, there might still be adhesive along those parts' sides (top-cover around the Honne engraving). These can be cleaned by gently rubbing with an alcohol-based cleaning solution.

Any maintenance or cleaning operations must be performed only after the appliance has been unplugged. Never use abrasive materials, as these may leave permanent scratches on the grinder. For proper cleaning, use a well-squeezed damp cloth together with cleaning products specifically designed for stainless steel and aluminium. Never use a direct water jet on the appliance.

Parts that come into direct contact with coffee beans can be cleaned separately, by hand, using water and mild liquid detergent. Do not use a dishwasher. The stainless steel tray is easily removable to facilitate cleaning the grounds that fall out of the grinding chute. To clean the burrs, use only known and widely tested coffee grinder cleaning pellets such as Grindz®.

Maintenance - Servicing

After approximately 800 kg of ground coffee, the grinder should be sent to us for a professional deep cleaning of the knives, or for replacement if necessary. During this periodic service, our technicians will disassemble the grinder, clean all internal components, and ensure that everything is properly aligned.

Over time, the drive belt may naturally loosen or stretch. The grinder is equipped with a built-in belt tensioner, which can be adjusted using a 2.5/3 mm Allen key and a 5 mm Allen key. For detailed instructions on how to adjust the belt tension, scan the adjacent QR code to access the video tutorial.

Scan this QR code to watch a step-by-step video tutorial.



Troubleshooting

! In case you have problems using the grinder, check the following before contacting Hedone:

! **Blocked Grinder:** With the motor turned off, increase the grind size until it reaches the highest number on the dial, lock it and start the grinding to clear out the burrs.

! If the grinder exhibits any other unwanted behaviour please contact us.

WARNING

! **Do not try and repair it yourself before contacting us as that will void the warranty, and risks damaging it.**

Contact info for servicing:

 +40 785 032 246

 sales@hedone.com

HEDONE®



HEDONE CAFE S.R.L.

Address:

Str. Aviatorilor 10, Parc Industrial
Craiova, Unit 14/C6.1 Ghercești Commune
Postal Code 207280
Dolj County, Romania

Telephone:

+40 785 032 246

Email:

sales@hedone.com

www.hedone.com